

Serving HAM Radio since 1959, On the Web Since 1995

Order **Toll Free** Monday through Friday, 9 am to 4 pm, **1 800 726 2760, 1 800 726 2919 or 1 866 300 1969**, Saturday 9 AM to 2 PM ALL Times, Eastern
NO MINIMUM ORDERS, Same Day Shipping, except Sunday and Holidays BUXCOMM Corporation 115 LUENBURG DRIVE EVINGTON, VA 24550
 Please **DO NOT** call Order Lines with technical questions. Our order lines are managed by sales personnel, and cannot transfer to tech support.
 BUXCOMM Tech Support is by expert ARO's, Technicians and Engineers. *Tech Support; Email; support@buxcomm.com

We accept:   

Hum & Noise Solutions

by G. E. "Buck" Rogers Sr; K4ABT

NOTICE: [We ship WINDOM and G5RV antennas worldwide. However: Due to excessive damage, we cannot ship HF Mobile or VHF Base antennas outside the continental USA !](#)

Solving hum problems in PC soundcards and Ham Transceivers

Before we get too deep into this discussion, let's look first at the primary source of hum and noise problems in PC soundcards and Ham Transceivers.

As a starting point; In laptop sound card audio, hum and noise is created by poor regulation within the battery charger/eliminator (hash) getting into the laptop soundcard:

A
lot of noise is introduced when the laptop battery eliminator/charger unit is plugged in, then the noise goes away when the unit is not plugged in. This is a sure give-away of poor power supply regulation. It never fails to appear when using the external laptop power supply.

I've learned to keep a second/spare hot battery ready as a backup to the laptop battery, and NOT use the power supply with the laptop while I'm operating the digital modes (SSTV, PSK31, Packet, etc).

I've tested literally hundreds of laptops, and more than 85% exhibit noise and hum on the transmitted audio signal while connected to the laptop battery charger. The noise and hum will disappear when the Laptop AC charger is removed from the laptop.

This same scenario applies when running your transceiver from a wet-cell or gel cell (marine) battery that has a poorly regulated battery charger attached. To get away from this "dirty" power source, use a good quality power supply (Astron or similar) that provides enough current and voltage to power the attached transceiver.

We run several 100 watt transceivers here in our lab at BUX COMM. The DC demand for each 100 watt (output) transceiver is 14 to 17 Amperes @ 13.5 volts. Sure, a 20 ampere, 13 volt DC power supply can handle a 100 watt transceiver, but I prefer a bit more

head-room, and use 13 volt DC power supplies, with current ratings of 35 amperes.

Other Computer Soundcard Problems:

When, and if, the computer is connected to a separate power outlet which may or may *not* be connected to a common (same) bond as the transceiver supply, it can result in a potential difference between the PC and the transceiver. This is where many ground loops are formed, causing hum to be superimposed on the transmitted audio.

If the sound card audio ground is indeed connected to the AC (utility) ground, and a high pitched sound or squeal is heard on other receivers, then look for RF feedback (base rectification) at the input or output of the PC sound card. [Often a ferrite bead placed around the](#) audio line will act as a block to ingress or stray RF. One of the best grounds (pardon the PUN) for using a [BALUN at the feed point of the antenna](#) is to keep RF at the antenna and prevent re-radiation back down the coax shield and into the HAM shack.

In some cases where the remedy mentioned above fails, the addition of a by-pass capacitor may be required. The value of the by-pass cap may be approximately .001 ufd to .01 uf. Under no circumstances will the by-pass cap be larger than .02 uf. A greater value than .02 uf may roll off in-band audio frequencies, and result in loss of audio output level.

BUT that is only part of the "ounce of prevention"

"Ground loops will cause horrendous hum, buzzes, and other noises, especially when connected to computerized gear or lighting equipment. The hum and noise are caused by differences in voltage potential from one end of the cable to the other. One remedy, of course, is to use audio isolation transformers in the interface devices similar to those we use in our RASCAL GLX. As Broadcast and design engineers, we understand ground loops. In fact, a major consideration in broadcast (Radio and TV) stations is to prevent ground loops. When done correct, there are no ground loops and no hum or other noises caused when using audio [isolation transformers](#).

Designers of personal computers are not usually audio engineers and evidently have never heard of ground loops. In fact, given the noise of the fans, CD ROM spinning, and blaring noise made by disk drives in the PC, it is a wonder they can hear at all. All that noise forces some PC users to keep the computer in another room.

Another source of hum and Noise:

The typical ground loop hum problem often occurs when you connect your computer (PC) sound card to a transceiver which is connected to an AC outlet that is *not* connected to the same bond or ground as the PC.

Finding ground loops is not always easy; Once found, the solution may be effortless. Solving ground loop problems in typical HAM radio and PC sound applications may be as simple as applying practical logic. If you have your transceiver and PC connected to different power outlet/circuits, *you may be closer to the solution than you think*.

Try connecting both the transceiver and PC to one "grounded" multi-outlet with a "third-wire ground" (bonded outlet), and then plug this multi-outlet into a grounded (bonded), wall AC outlet.

 
This usually solves eighty-five percent (85%) of all hum (ground-loop) problems, simply because you've created a star-point grounding scheme for both the PC and Amateur Radio transceiver. If this scheme does not cure the ills of the hum-loop, it could be that no bond or third-wire ground exists in your AC (utility) wall outlet.

If the by-pass cap is to be used, install it from the transmit audio line to the shield/ground. This is sometimes easiest achieved at the transceiver input connector (or jack).

As an adjunct to all the above, we can also employ the use of a line IN and/or line OUT isolator.

As a final note: Many times, an over-driven interface with no attenuator or 40 db pad, can be construed as noisy or
--

distorted on-the-air audio. In more than 85% of the soundcard or digital mode cases, the cure for this problem is to simply add a 40db pad as shown below. **For the operator with sound card I/O, and a high-level SPEAKER OUT. Use a 40 db attenuator . \$ 7.95 Order**



40DBPAD

May you have clean and clear audio, and *73 de Buck Rogers; K4ABT*

[CLICK HERE to eMail TECH SUPPORT](#)



Resellers, contact [BUXCOMM](#), President and CEO, Ms Mata, for dealer discounts and quantity pricing, 1 866 300 1969

INDEX to our web pages

RASCAL GLX with both USB & Serial Interface	RASCAL GLX Serial Cable only, w/FREE Cable	RASCAL to Radio, Adc
RASCAL Kit & with FREE Radio Cable (64)	PacketRadio to TNC Interface Cables	BASE Station Antenna
MOBILE Antennas & Accessories	BALUNS 1:1, 2:1, 4:1, 6:1, 9:1, 12:1, 16:1 & More	RF Connectors, Cables
WIRE Coax, Rotor, Power, Dacron Rope+	TOROIDS BALUN Cores, & Noise Suppres	Amateur Radio Transc
METERS, Power, SWR, Panel, DMM, DVM	POWER Cords, Fuses, Fuse Holders, Wire	POWER CORDS, Conn
AUDIO Connectors, Cables and Adapters,	Audio and Power Transformers	SWITCHES, RASCAL/M
TOOLS & TEST EQUIPMENT	MICROPHONE Replacements & Headsets	SOLID STATE, RF Pow
SPEAKERS Headsets, & Accessories	MAIL ORDER FORM	MAIL ORDER FORM (p
LINEAR Installation Kits	ISO SoundCard to Transceiver Interface KIT	RASCAL Spare cables
HAM Digital, PSK, & Packet Books, Two CD set	MICELLANEOUS Items	RASCAL or TNC Cable
Antenna Handbook Pt I	Antenna Handbook Pt . II J POLES FOREVER	Antenna Handbook Pt
Antenna Handbook Pt IV	Antenna Handbook for the WINDOM Antenna	WF4W Tests the BUXC
Accessory Jack, and Microphone Data	RASCAL>Radio Interface Cable Diagrams	SOLVING HUM & NOIS
Computer Connector Diagrams for HAMs	HAM microphone wiring index	Grid Square Map of the

A PSK31 Guide & Handbook (Must Read)

SOLAR power your Packet Nodes

Glossary of HAM Radio Digital Terms

PacketRadio Band Plan

Parameters & Setup TheNET X-1J4 Nodes

GE PHOENIX 9600 b/s Packet Mod

Motorola Mitrek Mod for 9600 b/s Packet

PacketRadio Handbook by Buck4ABT

RASCAL to IC 706 MK IIG for EchoLINK

LOTS of SoundCard Software for the RASCAL

Alignment procedure for MFJ 1270 TNC

Shipping and Returns Policy

HOME to PacketRadio.com

Setup Tips for the New RASCAL GLX

HAM Radio Books on CD (set of 2)

Packet Radio Guide for the new HAM

Building Packet Networks Handbook

GE DELTA 1200 Baud MOD for Packet

BUXCOMM 9600 baud Packet Handbook

KANTRONICS KPC3 as an TheNET Node

TheNET X1J4 NODE code and manuals

Frequency Spectrum Allocations

HAM Radio Software & FREEware

Display All Products >takes a minute to load

BUXCOMM Mail Order Form

New HAM Radio site with lots of Info

Grounding & Lightning

Download our BUXCOMM

PacketRadio Program

How to Build Packet N

GE DELTA 9600 b/s Pa

GE RANGR Mods for H

EPROM Order Form fo

RASCAL Setup for Ech

CB Microphone Wiring

From a ZEPP to a J-PC

Customers Comments

HOME to BUXCOMM.c

Tell your friends, you found it at:



Serving HAM Radio since 1959, On the Web Since 1995

Order Toll Free Monday through Friday, 9 am to 4 pm, 1 800 726 2760, 1 800 726 2919 or 1 866 300 1969, Saturday 9 AM to 2 PM ALL Times, Eastern
NO MINIMUM ORDERS, Same Day Shipping, except Sunday and Holidays BUXCOMM Corporation 115 LUENBURG DRIVE EVINGTON, VA 24550

Please DO NOT call Order Lines with technical questions. Our order lines are managed by sales personnel, and cannot transfer to tech support.

BUXCOMM Tech Support is by expert ARO's, Technicians and Engineers. *Tech Support; Email; support@buxcomm.com

We accept:



All text and graphics on these pages are ©™ of G. E. Rogers Sr and BUX COMM Corp 1986- 2007



[CLICK HERE to download RASCAL GLX to REPEATER interface Instructions via EchoLink](#)

Shipping/Handling & warranty Return policy

*** "RASCAL" is Registered trademark ®™ of BUX Communications Corp (BUX CommCo ™) *(RASCAL™® "Radio**

We ship WorldWide; However: Due to a large number of losses, missing items, damage, and similar issues; WE DO NOT SHIP TO: Mexico, Indonesia, or Nigeria !